

architectural BRONZE CASEMENTS


MEASURING INSTRUCTIONS

CHECKING YOUR OPENINGS

Firstly, check that window openings are square, take 3 measurements in height and width across each opening to make sure they match. Check diagonal measurements to ensure openings are square. Check alignment with a spirit level to indicate any bowing or anomalies.

If an opening is slightly out of square, it is better for any variation to be made up in the fitting tolerances, than the window be made out of square.


If the opening is very irregular, we can offer a templating service. Please call to discuss if in any doubt.

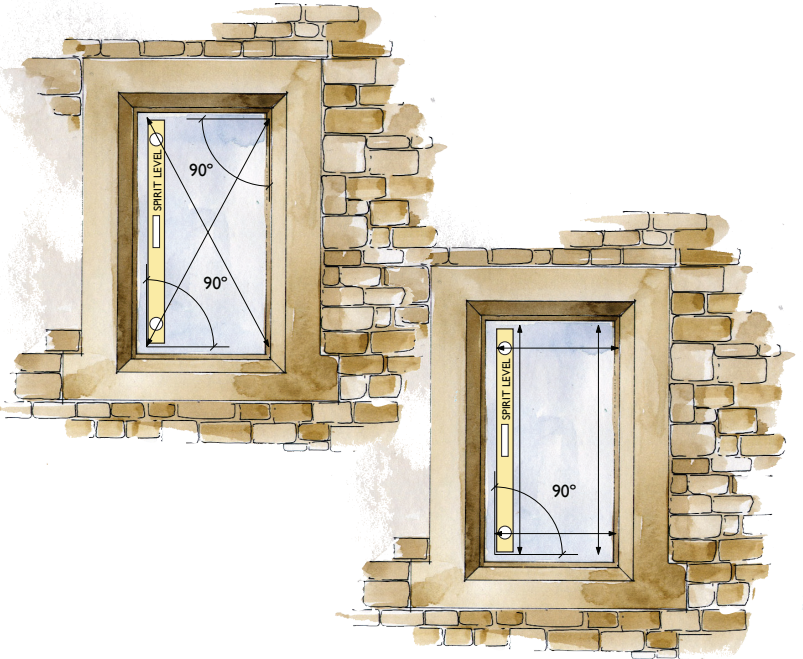

PROVIDING US WITH MEASUREMENTS

When measuring for a casement, allow for a minimum of 4mm tolerance between stone/rebated sub-frames and casement **AS SHOWN BELOW**.

A minimum 12mm rebate is required to fit our standard leg casements, if insufficient rebate is available, we offer an equal leg extrusion or can suggest alternative fixing methods. Please call to discuss the options available to you.

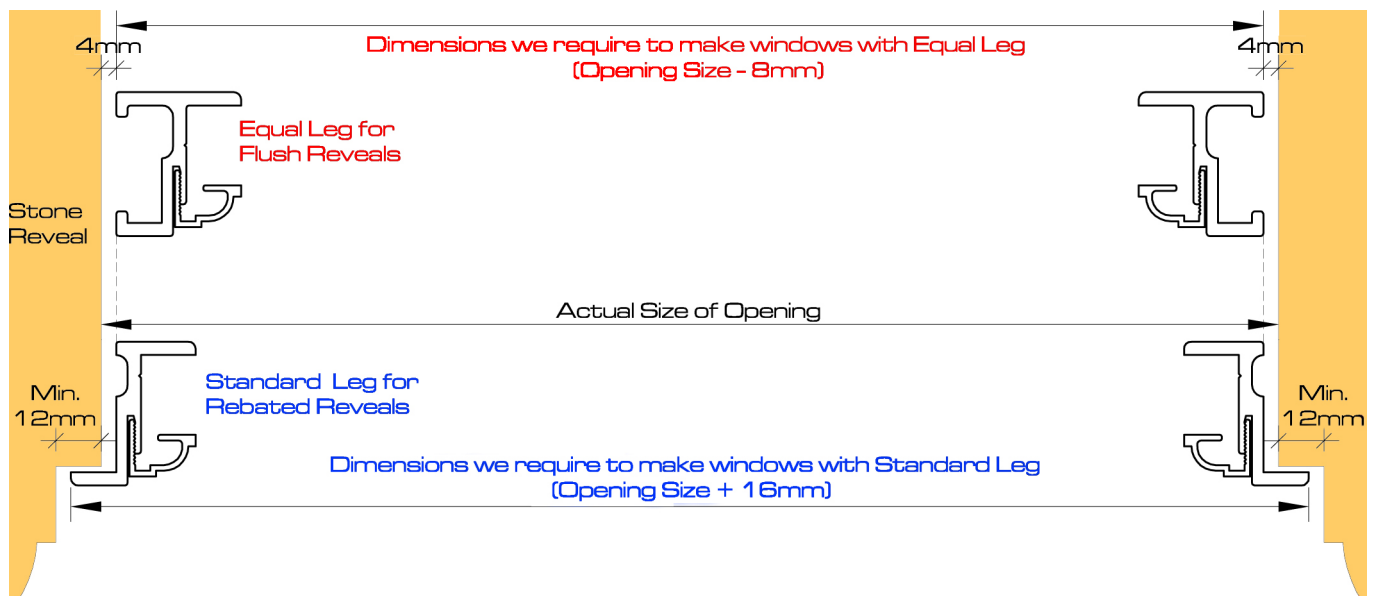

These guidelines are supplied as information only. Suitability of materials, tolerances and preparation methods suggested must be confirmed by the end user, client, installer or architect.